

PRODUCT OVERVIEW

Keep up to 60 of your precious memories at your fingertips with our Digital Photo Keychain. It's so simple to use. Photos download directly from your computer onto the keychain and are automatically resized to fit the ultra bright, high-resolution, 1.5" color LCD screen. The fully rechargeable internal battery provides up to 3 hours of viewing time.

PRECAUTION

Please read the following instructions carefully for your safety and to prevent damage to the unit. Do not discard these instructions as they contain important information regarding the proper use and care of your device. For optimum performance, please fully charge the device before using. (see page 3.)


1. **DO NOT** expose to extreme temperatures.
2. **DO NOT** expose to moisture or get device wet.
3. **DO NOT** store in dusty areas.
4. **DO NOT** expose to harsh chemical cleaners.
5. **DO NOT** expose to direct sunlight or heat sources.
6. **DO NOT** try to disassemble or repair the device. No serviceable parts.
7. **DO NOT** exert excessive pressure on the device.
8. **DO NOT** place heavy objects on top of the device or drop the device.
9. **DO NOT** use near any appliance that generates a strong magnetic field.

CAUTION

- 1) To reduce the risk of electric shock, do not remove cover. There are no serviceable parts inside.
- 2) To reduce the risk of fire and electric shock, do not expose this unit to rain or moisture.

Environmental Information Follow your local guidelines for waste disposal when discarding packages, batteries and electronic devices.

LOCATION OF CONTROLS

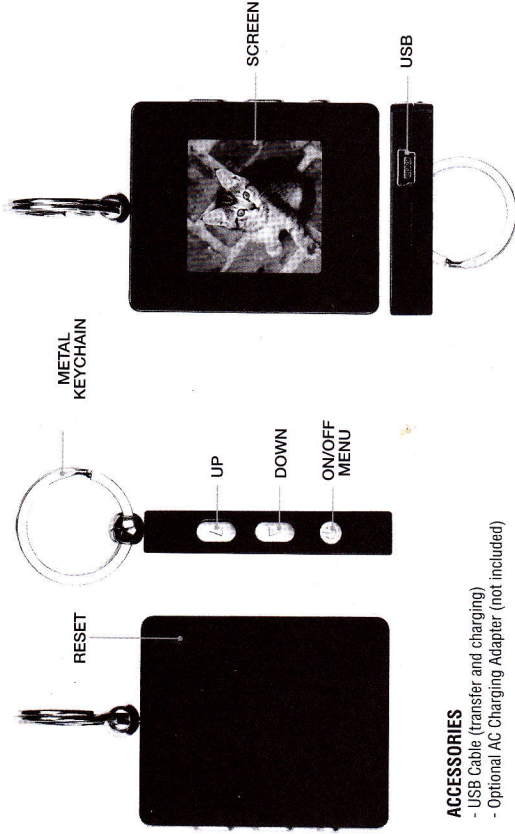

ACCESSORIES

- USB Cable (transfer and charging)
- Optional AC Charging Adapter (not included)

1

BASIC OPERATIONS

POWER ON: Press and hold [MENU] for 1 second to power on unit to photo viewer mode.

POWER OFF: Press and release [MENU] to access main menu, then press and release [] to select power off.

AUTO POWER OFF: When device remains idle, it conserves battery power by automatically powering off after 3 minutes.

TIME DISPLAY MODE: From the menu select clock set. Press and hold [] or [] for 2 seconds to display YEAR-MONTH-DAY-HOUR-MINUTE-SECOND-DAY OF THE WEEK.

LOW BATTERY: When the battery is low, the screen will display " [] "

CHARGE BATTERY: Connect the USB cable to the photo viewer and then connect the USB cable to the computer's USB port. The battery charging meter will appear on the screen.

RESET: If photo viewer malfunctions, press the RESET button located on the back of the photo viewer.

TO ACCESS MENU FUNCTIONS

- MAIN MENU ACCESS: Press [MENU] button.

3

TO SELECT MENU FUNCTIONS

- SELECT MENU ITEM

Press [] or [] to move arrow.

- POWER OFF

Unit will automatically turn off to conserve power, or press and release [MENU] to power off.

- DELETE IMAGE

You can delete the currently displayed image. When an image is displayed, press the [] button and select 'Delete Image'. Select "Delete one" to delete one image or "Delete All" to delete all images in the photo viewer. After selecting "Delete One" or "Delete All", the message "Delete ?" will appear on the screen. Press [] button to confirm delete. Press the [] or [] button or stay idle for a few seconds to cancel delete and return to photo view mode.

- DISPLAY MODE

Press [] or [] to move arrow. Select AUTO SLIDE to set slideshow seconds between photos. Select MANUAL SLIDE to cancel AUTO SLIDE function.

- CLOCK SETTING

You can set the year, month, day, hour, minute and second manually. Use the [] or [] button to select each item, and then press the [MENU] button to complete the setting. The week displayed is automatically adjusted based on the time setting.

- CLOCK DISPLAY

Press [] or [] to switch to 12/24H.

- BACKLIGHT

Press [] or [] to set backlight level of the display.

- EXIT

Press [MENU] to exit menu functions.

4

DOWNLOADING PHOTOS USING THE PHOTO VIEWER SOFTWARE

WINDOWS

1. Connect the USB cable to your computer and the photo viewer. Your photo viewer will now show "updating". Your system will find the removable disk.
2. Your system might recognize the software automatically, if not go to "My Computer" on your computer's desktop and open the removable disk. Run the photo viewer.exe file to launch application.
3. Use photo viewer's file manager to browse on your computer.
4. Once you select a photo, it will show up in the crop marquee. Pick "⊞" or "⊞" buttons to zoom in or zoom out, move the box to the area you want for the picture and click the "⇒" button. This will move your photo to the collection panel.
5. Delete any unwanted photos by selecting the image in the collection panel and clicking the "Delete" button from the menu bar then press "Synchronize" button to complete deletion.
6. Once you have all the photos in the collection panel that you want on your keychain, click "Synchronize" button. You will see that the status has changed and the black bar will show completed percentage.
7. Once the download is 100% complete click "Exit" button to exit the program and disconnect the photo viewer.

IMPORTANT: Always follow system instructions to safely remove USB device.


MAC OS

1. Connect the USB cable to your computer and the photo viewer. The photo viewer will now show "updating" on the LCD screen. Your system will find the CD driver which will appear as photo-viewer CD icon on your desktop.
2. Double click the photo viewer.zip file to launch the photo viewer application. Your system will unzip the file and display the photo viewer icon.

NOTE: This process is for first time use only. Once photo viewer application is on your desktop, simply click on the application.

3. Use photo viewer's file manager to browse on your computer.
4. Once you select a photo, it will show up in the crop marquee. Select "⊞" or "⊞" buttons to zoom in or zoom out, move the box to the area you want for the picture and click the "⇒" button. This will move your photo to the collection panel.

5

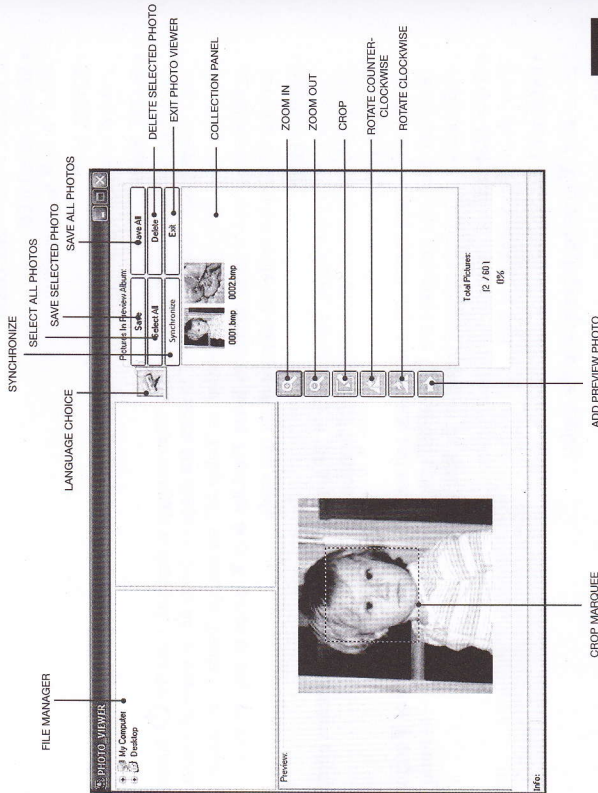

5. Delete any unwanted photos by selecting the image in the collection panel and clicking the "Delete" button from the menu bar then press "Synchronize" button to complete deletion.

6. Once you have all the photos in the collection panel that you want on your keychain, click "Synchronize" button. At the bottom of your screen you will see that the status has changed and the black bar will show completed percentage.

7. Once the download is 100% complete click "Exit" button to exit the program and disconnect the photo viewer.

IMPORTANT: Always follow system instructions to safely remove USB device.

ADDITIONAL NOTES:

1. Please note that when charging from your USB cable to the computer, full charging time will take up to 3 hours. If you are charging using your own DC car charger or AC wall adaptor, charging time will take up to 3 hours.

For Technical Support,

Please Visit

www.mscustomer.com or

Call 1-800-374-2744

©2010 Sharper Image Acquisition, LLC. All rights reserved.

©2010 MerchSource, LLC. All rights reserved.

THE SHARPER IMAGE® name and logo are registered trademarks of Sharper Image Acquisition, LLC used under license by MerchSource, LLC. All other logos and trademarks are proprietary to their respective owners. The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notice forms on this package is not permitted.

Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

Printed in China

THE
SHARPER
IMAGE

USB 2.0 DIGITAL
PHOTO KEYCHAIN



USER MANUAL

7